





START HERE

1

Unpack box and make sure you have all items shown here.

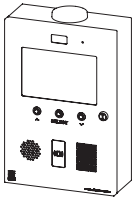

Ascent Unit

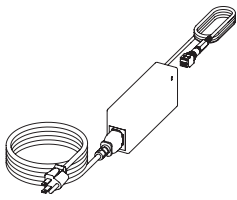

24-V AC/DC Adapter




Key



Carriage Bolt
(4x)




Hex Nut
(4x)

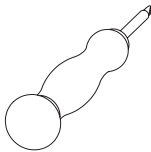

Screwdriver


2

Unlock and open unit for mounting, wiring, and setup.

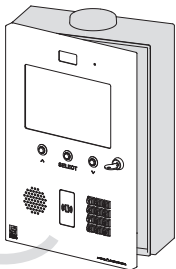

3

Mount unit to pedestal using included mounting hardware.
(This step may be completed later.)

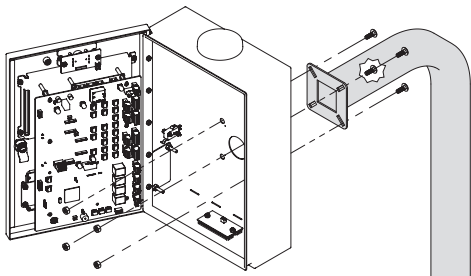

IMPORTANT



This Ascent unit **WILL NOT WORK** until the activation process is **COMPLETE!**

See the included **Activation Guide** to get this unit activated.

If you need help or have any questions, please contact **Summit Control** at **(972) 474-6422**.



WARNING



AUTOMATIC GATES CAN CAUSE SERIOUS INJURY OR DEATH!

ALWAYS CHECK THAT THE GATE PATH IS CLEAR BEFORE OPERATING!

REVERSING OR OTHER SAFETY DEVICES SHOULD ALWAYS BE USED!



IMPORTANT



We recommend mounting the unit on a gooseneck pedestal using the included mounting hardware.

If using alternate mounting, the **4G LTE Antenna Extension Kit (Model 16-ANTX-1)** should be purchased and installed.

Failure to do so may result in NO SIGNAL!



CAUTION



Use all four carriage bolts when mounting the unit to a pedestal.

Leave the "hockey puck" antenna in place even if using an antenna extension.

Seal all openings created in the enclosure.

Failure to follow these instructions can damage the unit!



STOP



This is a cellular accessory for a gate or door. An uninterrupted cellular connection **CANNOT BE GUARANTEED!**


An emergency egress or primary entry mechanism **SHOULD ALWAYS BE USED!** (transmitter, fire box, mechanical release)

Consult with your dealer, distributor, and/or system designer for more information.

What's what?

All important components labeled

Unit shown with door fully open.
Internal wiring not shown for clarity.

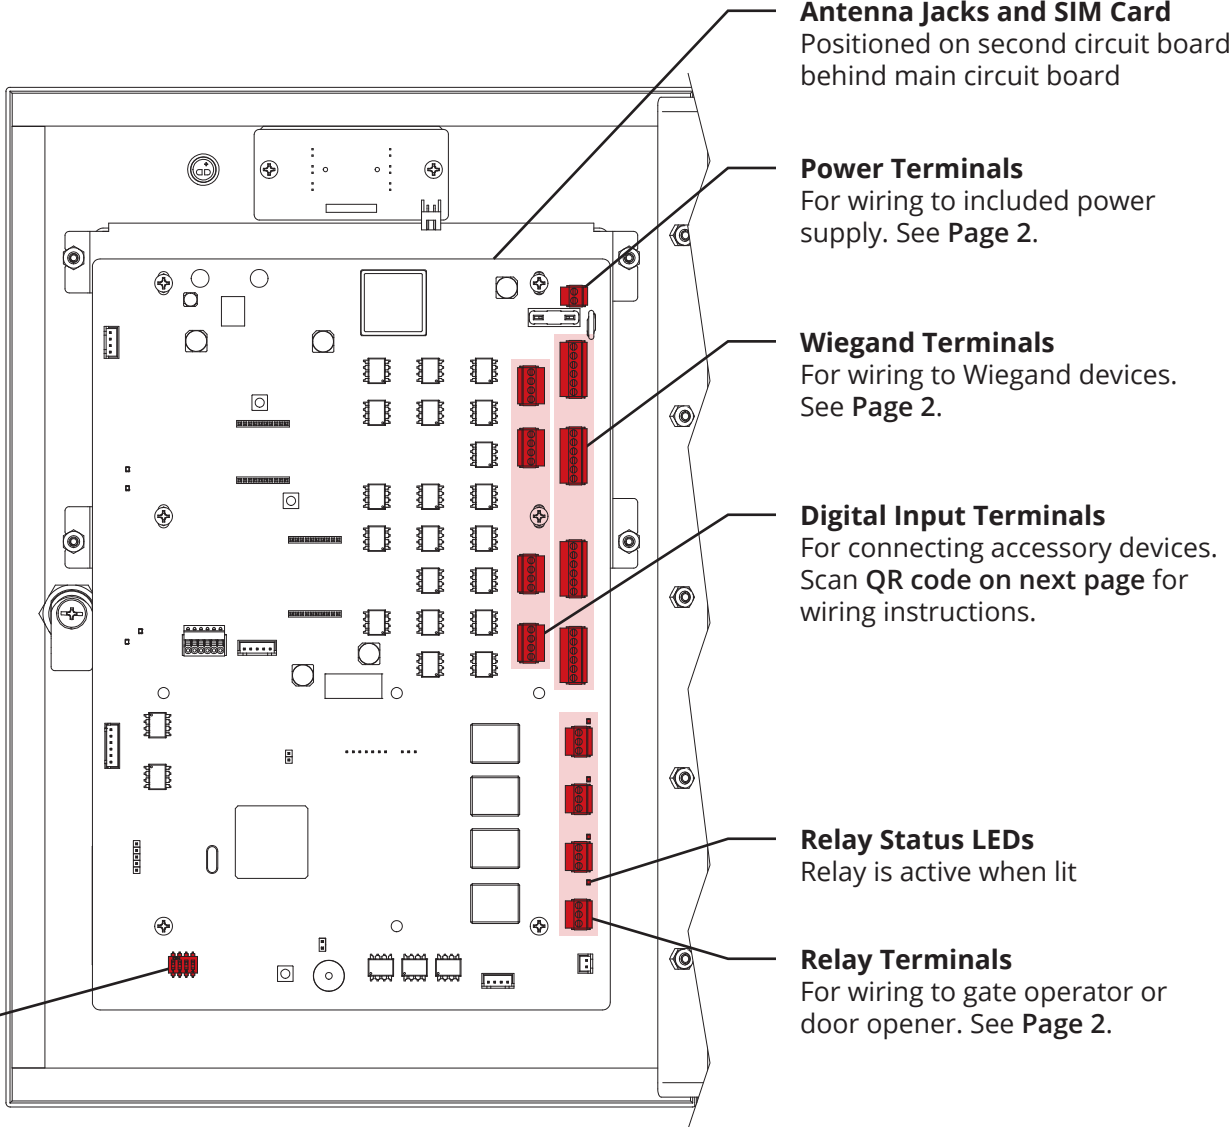

NEED HELP

Call (972) 474-6422

Email support@summitcontrol.com

We are available **Mon-Fri / 8am-5pm Central**

Flip page to continue...

4

Connect wires

Feed wires through back of unit, and connect as shown using included screwdriver.

Consult gate/door opener manual for exact connections.

Terminals vary widely across manufacturers and models.

Additional wiring diagrams can be found below and online.

⚠


CAUTION

⚠

When connecting the power supply, remember to connect positive to positive and negative to negative to avoid damage.

Reversing polarity can damage the unit and void the warranty!

We recommend using 18-gauge stranded wire for all connections.

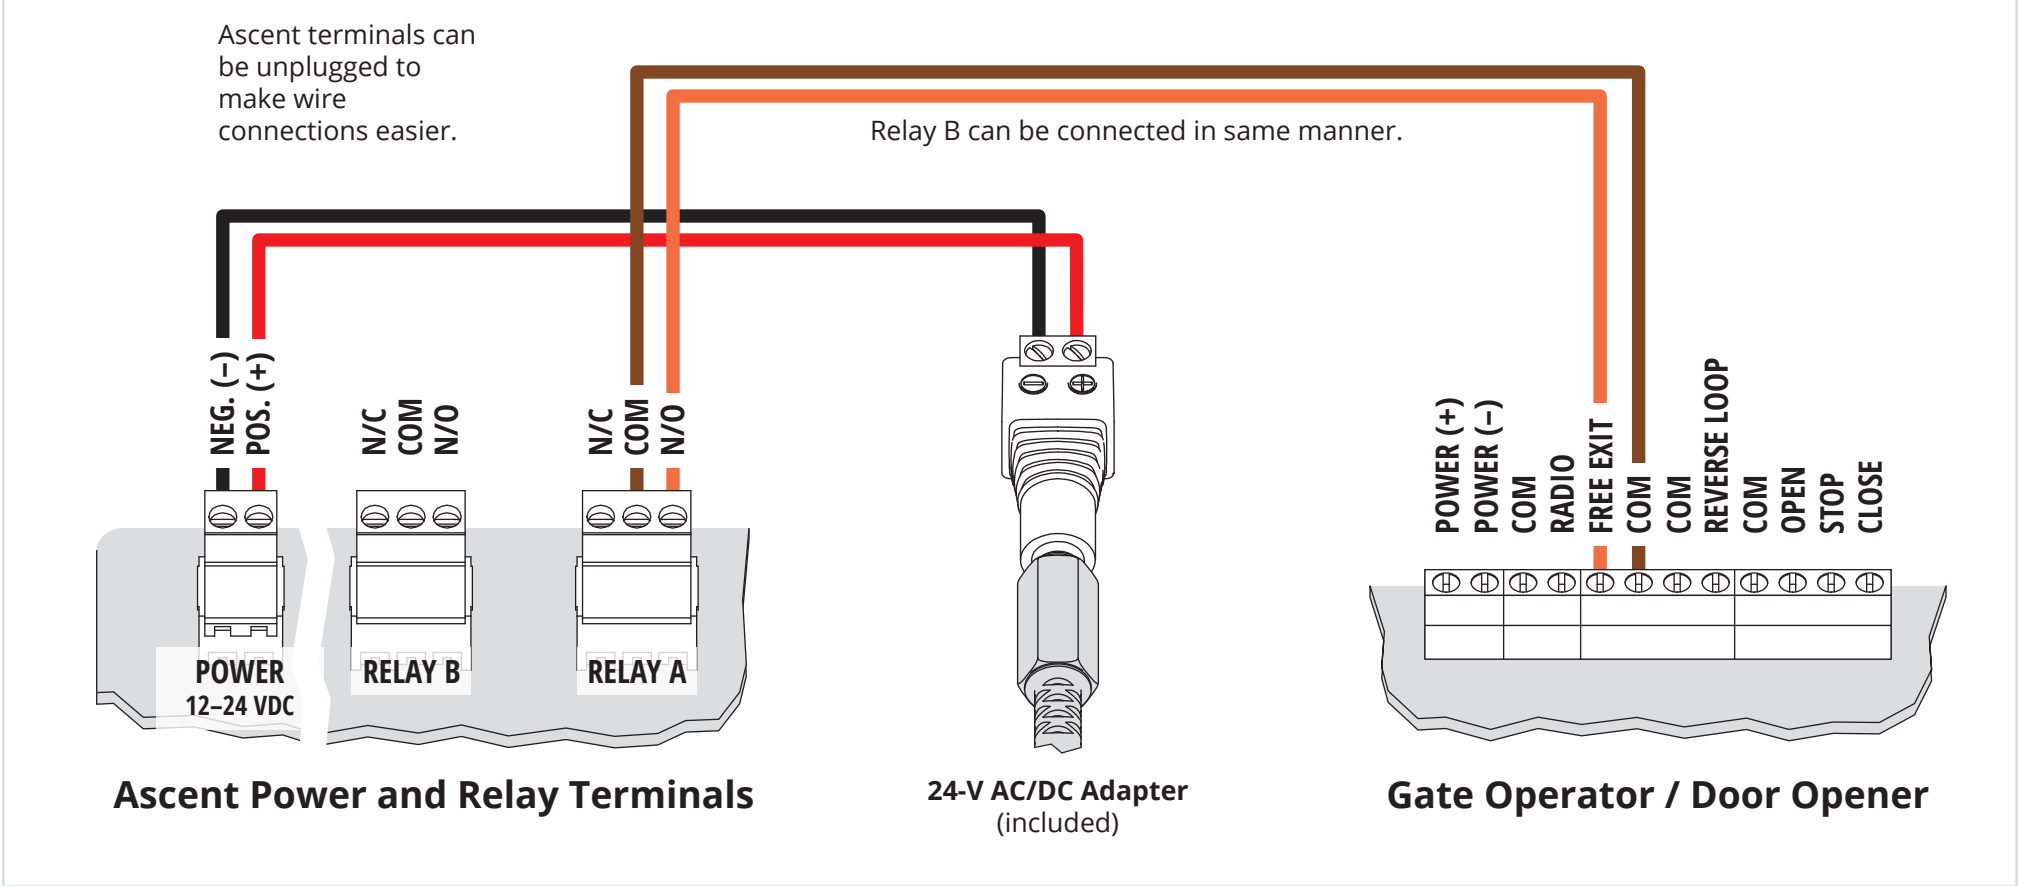

⚠

STOP

⚠

Before going forward, double check all wiring and make sure the unit has power!

A wiring diagram for connecting to Wiegand devices can be found below.

For connecting accessories not mentioned, please scan the QR code on this page.

Make sure the gate path is clear before completing Step 5!

5

Key in temporary code 2012 on keypad and confirm gate opens. If it does, close and lock unit.

2012

Adding and deleting codes is done through Summit Control and **NOT** from keypad on unit!

✓

INSTALLATION COMPLETE!

Now follow the **Activation Guide** to create an account and begin using Ascent.

A

Wiegand Device

Feed wires through back of unit, and connect as shown using included screwdriver.

These terminals are used to connect a Wiegand device such as a card reader or Wiegand keypad.

Any set of Wiegand terminals can be used for wiring and then configured in Summit Control.

⚠

CAUTION

⚠

Disconnect power to the Ascent unit before connecting Wiegand devices.

Failure to disconnect power can damage the unit!

Ascent terminals can be unplugged to make wire connections easier.

The diagram shows the wiring for a Wiegand device. On the left, the 'Ascent Wiegand Terminals' are shown with two sets of terminals: WIEGAND 1 and WIEGAND 2. Each set has terminals for DATA 0, DATA 1, GND, +12V, LED 1, and LED 2. On the right, the 'Wiegand Device' terminals are shown with labels: LED 1, LED 2, DATA 1, DATA 0, GND, and +12V. Wires connect the Ascent terminals to the Wiegand Device terminals: a green wire from WIEGAND 1 DATA 0 to Wiegand Device DATA 0, a red wire from WIEGAND 1 DATA 1 to Wiegand Device DATA 1, a black wire from WIEGAND 1 GND to Wiegand Device GND, a brown wire from WIEGAND 1 +12V to Wiegand Device +12V, a blue wire from WIEGAND 1 LED 1 to Wiegand Device LED 1, and a blue wire from WIEGAND 1 LED 2 to Wiegand Device LED 2. A similar set of connections is shown for WIEGAND 2.

Ascent Wiegand Terminals

Wiegand Device

Need More?

Use the QR code below to get access to more resources, including how-to videos and additional wiring diagrams for connecting accessory devices.

Information icon